



Quick Start

Use this for best experience

Startup

When the controller first powers up you can:


- enter your WiFi credentials (*preferred*),
- use Manual mode, or
- set the clock (*required when no Wifi*)



OFF screen


For normal operation, select **Auto**.

To set automatic turn-on and turn-off times, select **Option**.

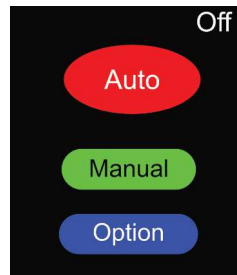


AUTO mode

The first time in Auto, the controller **scans** for a sensor.

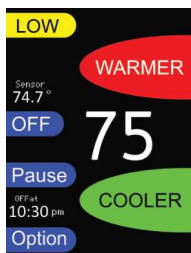


Startup the sensor by pressing and holding its button until the blue light flashes (it might not light on the first try).

Press & Hold until Blue Glow

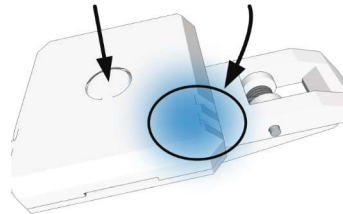

When it finds the sensor, it will ask you if it's OK to pair. Select **YES**, then **clip the sensor** to a nearby cooler air vent.

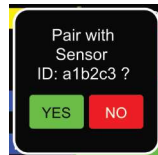

See reverse side for IMPORTANT note


IMPORTANT: In **Auto** (normal) mode, the fan runs continuously **ONLY when outdoors is warmer than indoors.**

When it's **cooler outside**, (mornings & evenings) and some other times, the **fan** may turn **on** or **off** for one or more minutes at a time.

This is normal operation.

MANUAL Mode

Manual mode allows you to directly control the pump, fan on/off, and fan speed.

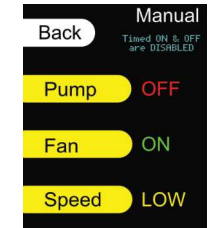

Restart

Try this any time something's misbehaving or you lose your place.

Press the small physical green side button until you see the display briefly go blank.

Restart **saves all of your settings.**



Celsius vs Fahrenheit

To show degrees in Celsius, select **Option > Setup** and then **UNITS**.



More Features

More features can be accessed via **Options > Setup**, including rotate display, sensor un-pair, status and update.

More help

Please visit www.RoadrunnerComfort.com or email help@RoadrunnerComfort.com